



Thermowell Quick Start Guide


Use this guide to help you install your Thermowell. This quick start guide is intended to use the lever punch tool (part number 210279-004) or combination can punch and countersink (part number 210279-001) provided separately. If needed, an accessory is available for rounded cans.

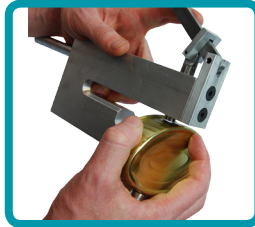


1 Punch hole in the can bottom or side using the appropriate tools.

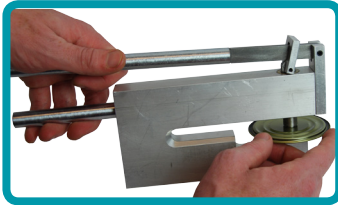

2 Slide the can fitting through the hole with the threads on the inside of the can.

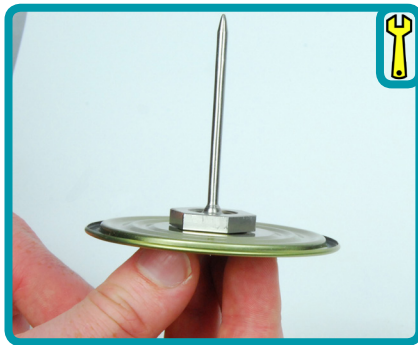

3 Using a wrench or socket tool, screw the Thermowell onto the can fitting on the inside of the can and tighten. The Thermowell installation is now complete.

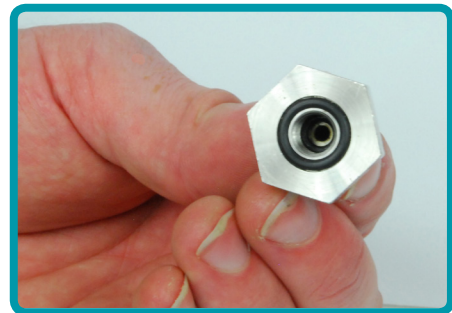

4 Before screwing the logger into the well, ensure that an o-ring is properly installed in the bottom groove of the can fitting.



5 The logger can now be placed in the well from the outside of the can and screwed to the bottom of the can fitting. It can now be removed at any time without breaking the seal on a finished product!